

SNAP+

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47


Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93



SNAP+

Backplane Controller for High-Speed Remote I/O

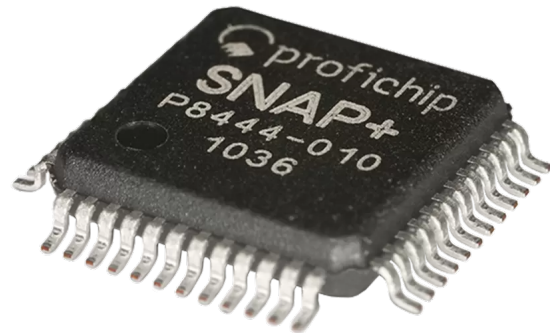

Basic SliceBus backplane information:

- Single master system
- Up to 64 slave (Node) stations
- Asynchronous, serial data transmission with 48 MBit/s over Point to Point LVDS physic
- Additional alarm line for initialization and asynchronous event communications from node to master
- Full system detection from SliceBus master without external information on module configuration

Error detection mechanism:

- CRC code with Hamming distance 4 for every telegram (all 3 bit errors will be detected)
- Watchdog function inside every node for SliceBus master observation
- "Auto shut down" in case of SliceBus master malfunction
- Retry statistic for early detection of possible transmission issues

Time-synchronisation:

- Every node has its own clock with 1 μ s resolution
- All node clocks are synchronized with the SliceBus master (accuracy <100ns)

Option for clock synchronization from SliceBus master to SliceBus master via different protocols
(Profibus DP V2, Profinet, Ethercat,...)

SNAP+ Technological functions:

Standard I/O function: 8 digital I/O or up to 32 I/O with shift register
Integrated digital input filter function
Asynchronous event signaling with μs time stamping for advanced nodes
Two advanced counters with AB oversampling, latch, reset, output, hysteresis, compare value, repetitive/endless counting and additional time stamp information
SSI function with time stamp information (speed calculations: counter difference/time)
Pulse Width Modulation with 20 ns resolution
Frequency measurement mode
Special digital I/O time stamp nodes (ETS: Edge Time Stamp System) for input edge and output control with 1 μs resolution (independent from fieldbus cycle!)

SPI interface in SNAP+ for analog I/O / safety / serial CP with external MCU:

2.6 Mbit/s SPI interface for external microcontroller
Up to 192 Byte for parameters, up to 16 Byte In / 16 Byte Out data for external microcontroller
Alarm function and watchdog function

Performance:


Different speed grades for data transmission
Multinode telegrams for maximum efficiency:
Write 64 nodes (8 outputs/node): 17 μs
Read 64 nodes (8 inputs/node): 32 μs (with node presence check), Asynchronous event reaction time: 9 μs

Mechanical and electrical specification SNAP+ (preliminary):

I/O voltage: 3.3 V, typ. 16 mA, core voltage: 1.8 V, typ. 16 mA

DI8 or DO8 modul without I/O load: typical: 5 V, 32 mA

LQFP 48 package, 9.0 mm², pitch 0.5 mm

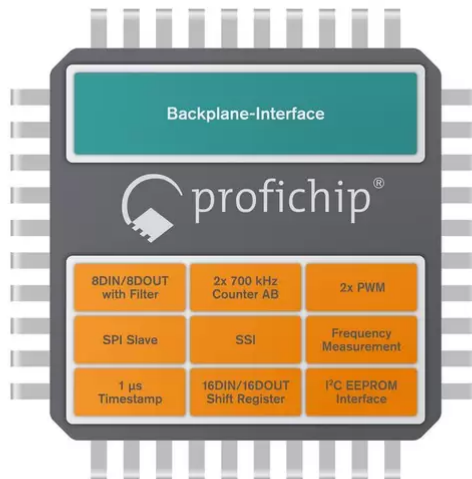

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93